


Designer Series

Rev 6/6/08

Waterfall

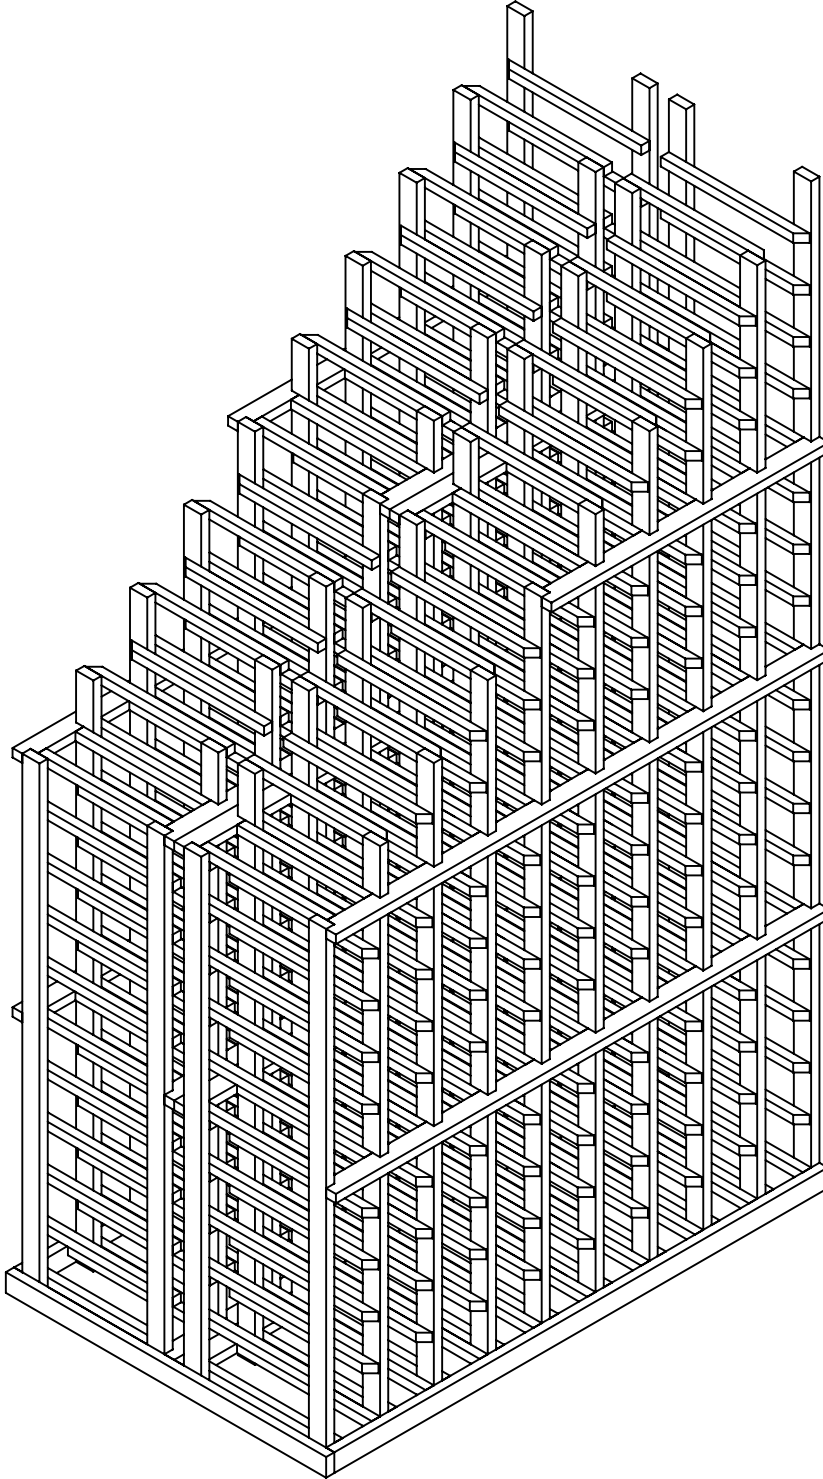


Wine Cellar Innovations
4575 Eastern Avenue
Cincinnati, Ohio 45226

Phone: (800) 229-9813
Fax: (513) 979-5280
www.winecellarinnovations.com

Waterfall



Rev 6/6/08

Parts List


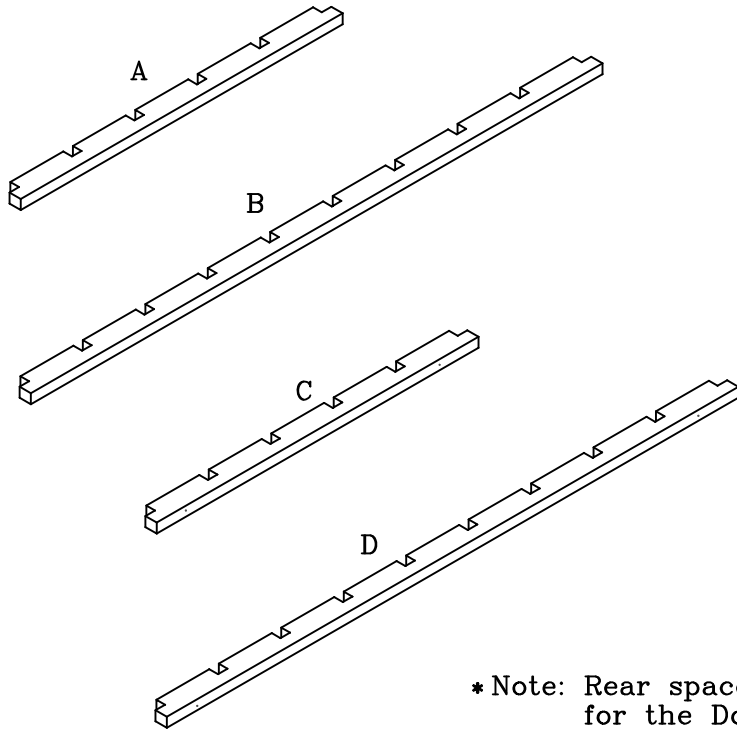


#	qty.	description
A	2	Front Spacer Bar#1
B	4	Front Spacer Bar#2
C	2	Rear Spacer Bar#1
D	6	Rear Spacer Bar#2
E1	1	Left#1
F1	8	Waterfall Commons#1
G1	1	Right#1
E2	1	Right#2
F2	8	Waterfall Commons#2
G2	1	Left#2
H	2	Side trim
I	1	Front trim
*	8	Dowel Rods
*	1	bag of nails
*	1	Hardware Pack containing 2 angle brackets 2 plastic anchors 2 1" #8 screws 2 5/8" #6 screws

*Note: Rear spacer bars have 2 extra holes in them for the Dowel Rods

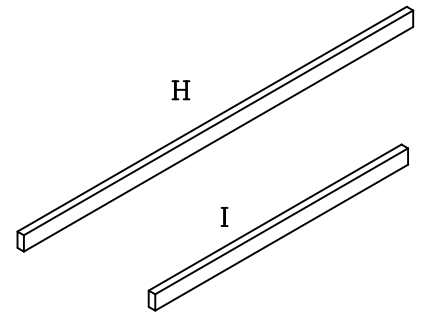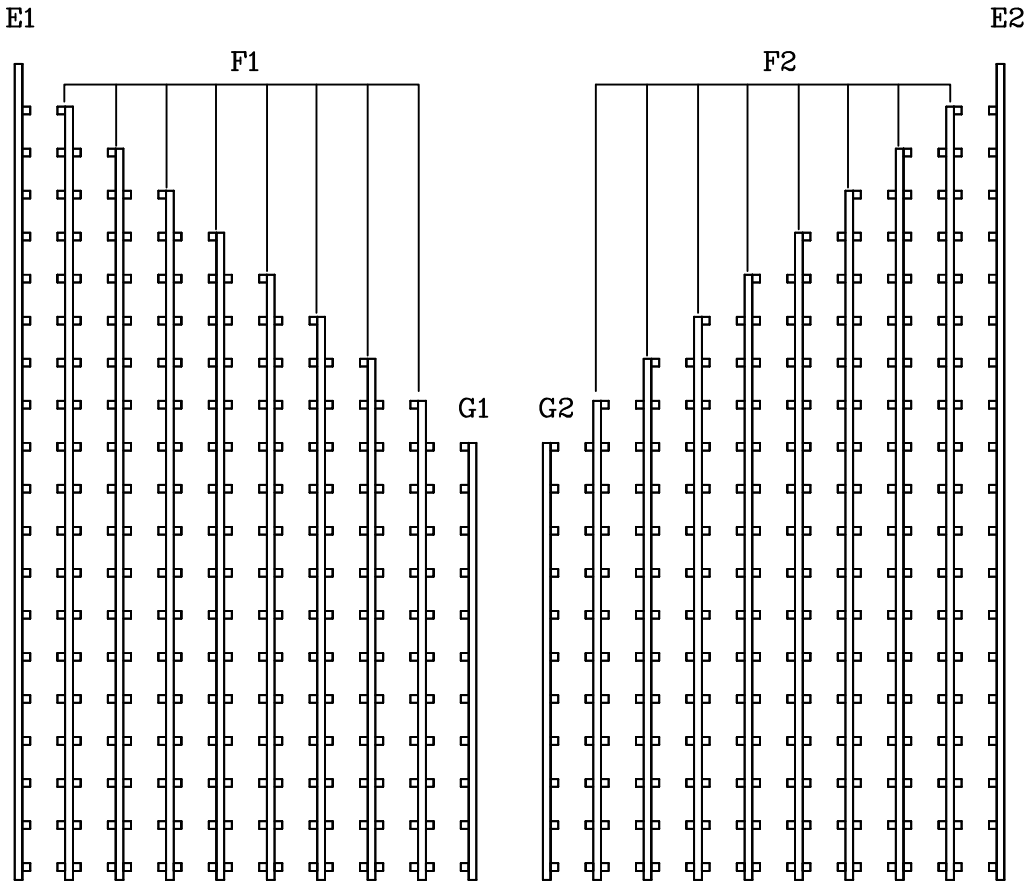


- Attach (3) rear spacer bar#2's and (1) rear spacer bar#1 to the back of Right and Left#1 and (8) waterfall common#1's with nails.
Nail through each notch in spacer bars into post. This can be done with the provided nails or with a brad nailer.

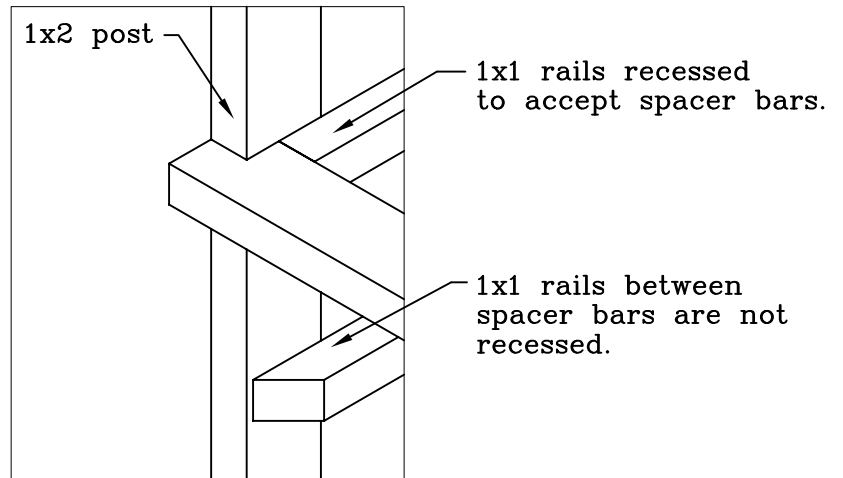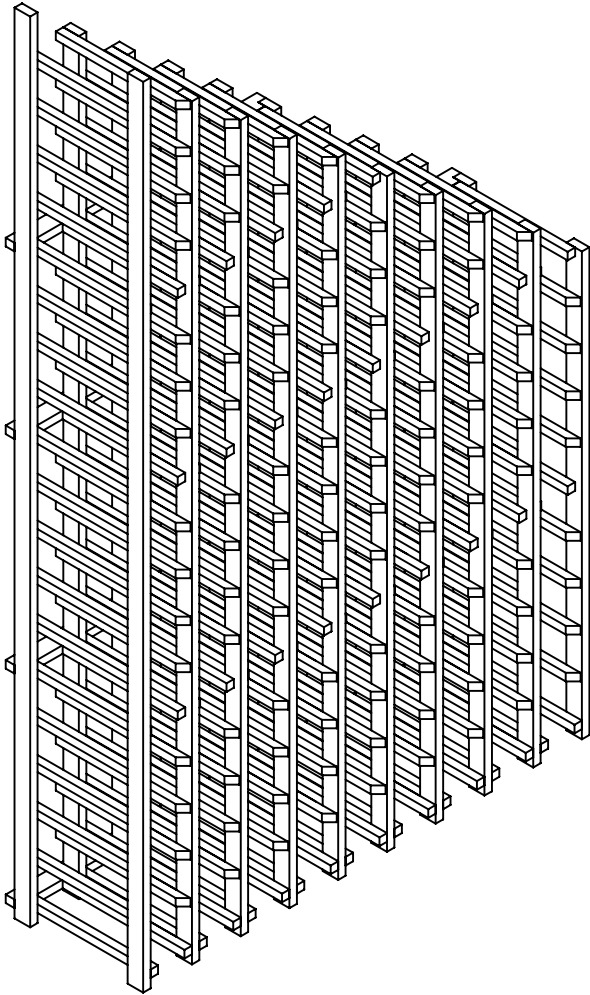

2.


- Attach (1) front spacer bar#1, and (2) front spacer bar#2's to racks

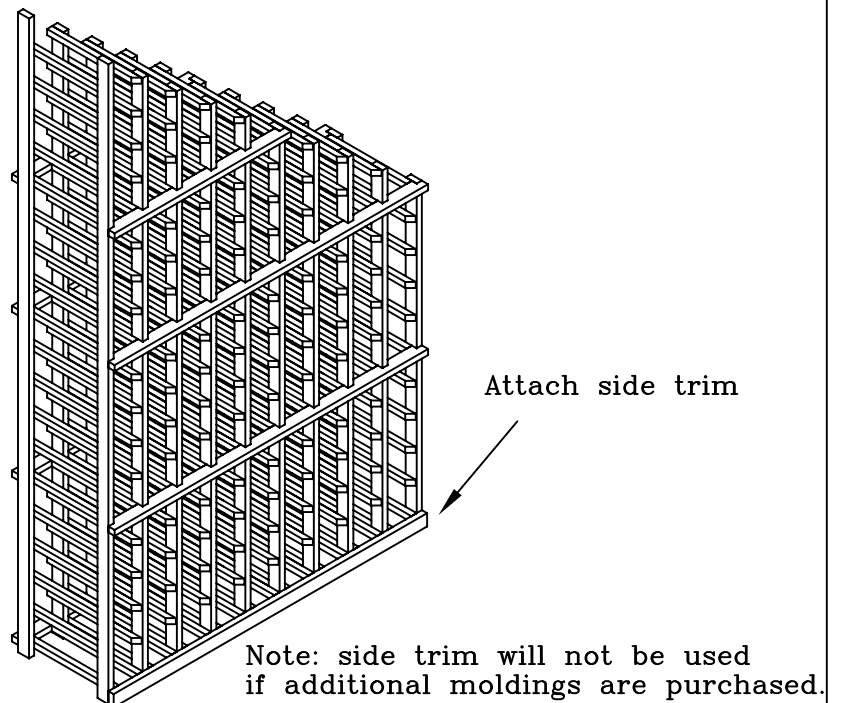


Repeat Steps 1-2 for remaining half of Waterfall.

3.

With (2) dowel rods per rear spacer bar connect the 2 halves of waterfall rack together.

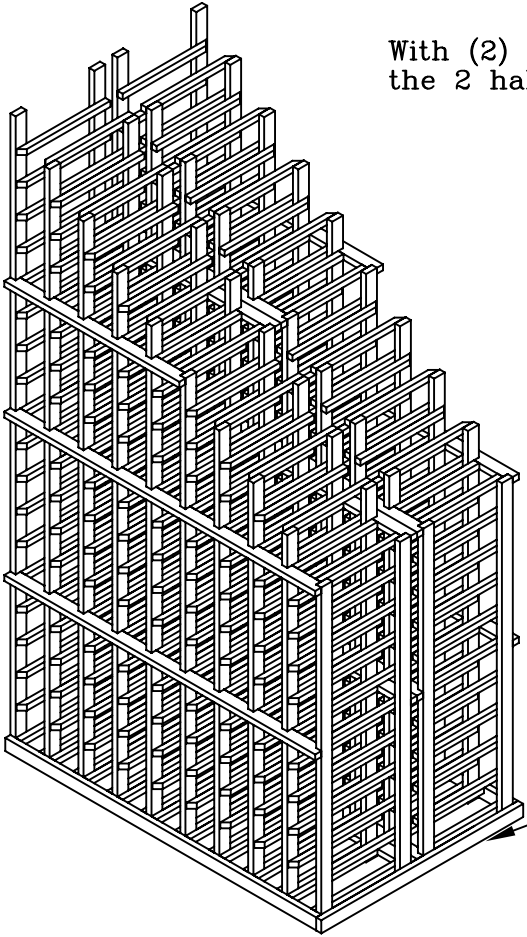


On 1 half of the racks place a dowel rod into each predrilled hole. Join the 2 waterfall halves together.

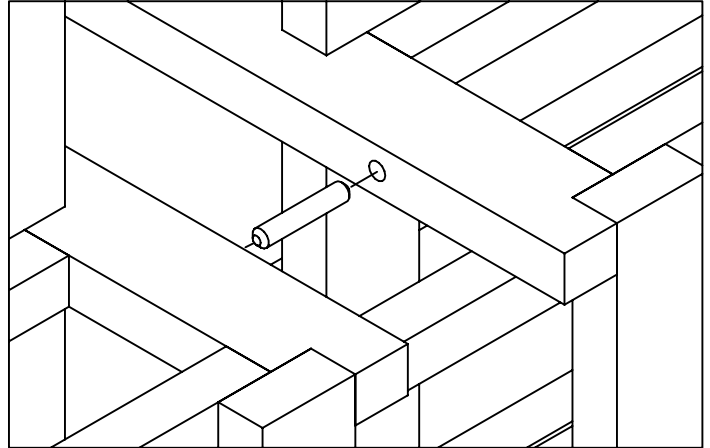

Attach front trim

Note: front trim will not be used if additional moldings or vertical display cabinet is purchased.

Waterfall Assembly complete.
You may now place "Vertical Display Cabinet"
(if ordered) at front of racks.

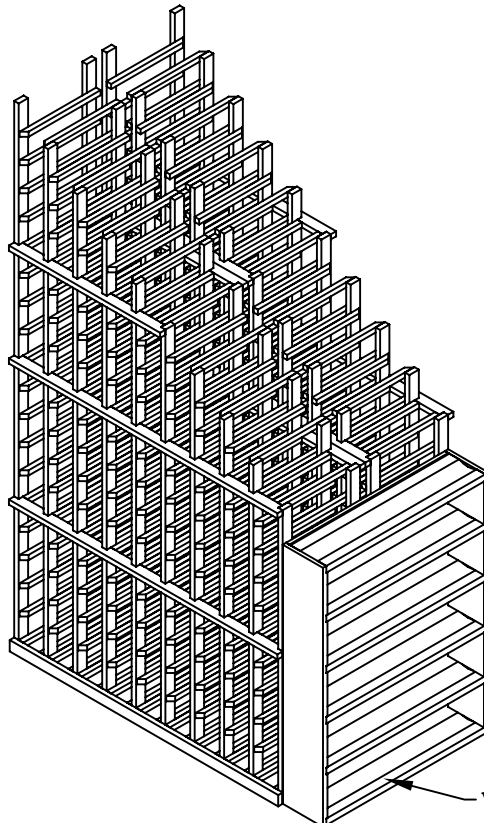

Vertical Display Cabinet

* Always remove all bottles before moving Racks.