



# RTRIM/RTRIMC

Rev: 3/5/09


Assembly notes:

Cut straight base/ crown molding to fit racking.

Attach molding to assembled racking by nailing through molding into spacer bars at top and bottom of racking.

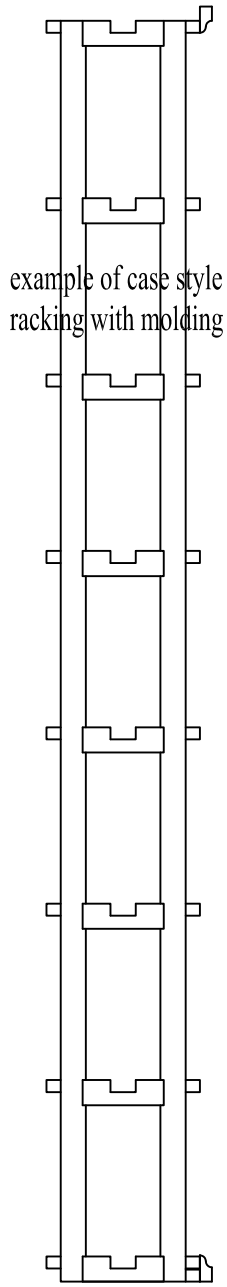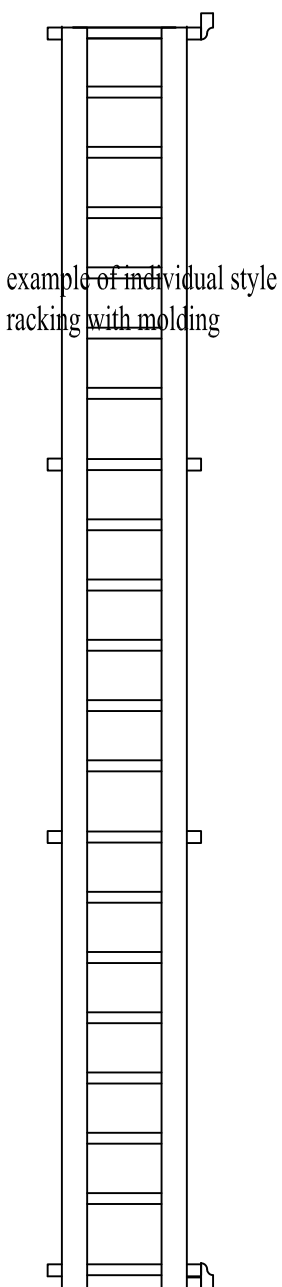

Contents: RTRIM  
(2) 4 ft. 1 7/16" ogee base/ crown

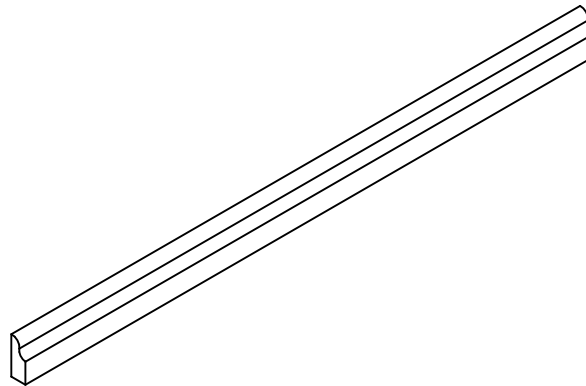

Contents: RTRIMC  
(2) curved 1 7/16" ogee base/ crown

