

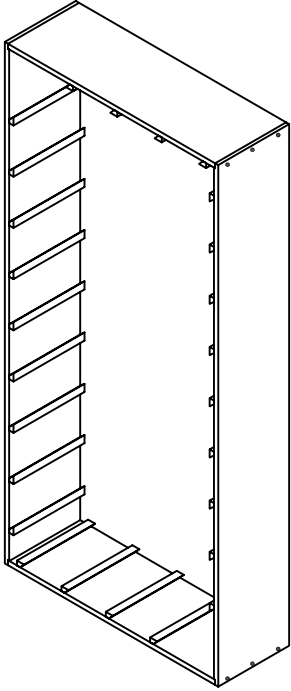


Angled Bin Assembly Instructions


1. Attach the top, bottom & sides together with the 2-1/4" #6 screws.




2. Insert cross boards into termination blocks. Boards will be lettered and can be referenced off of the rack design.

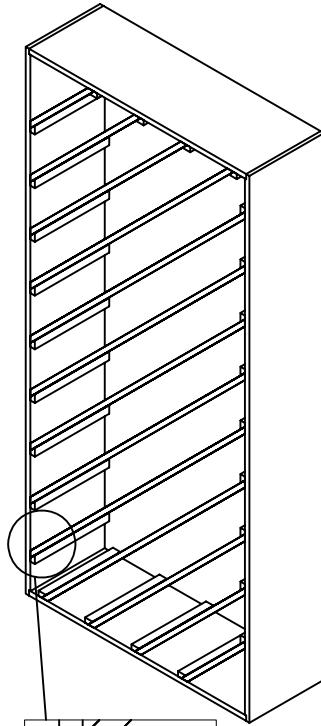


3. Attach perimeter trim to front and back of unit. Nail through trim and cross boards at each termination point.

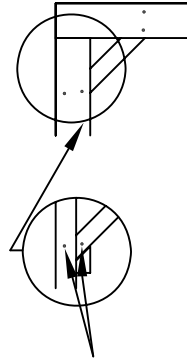

nail through frame and cross board

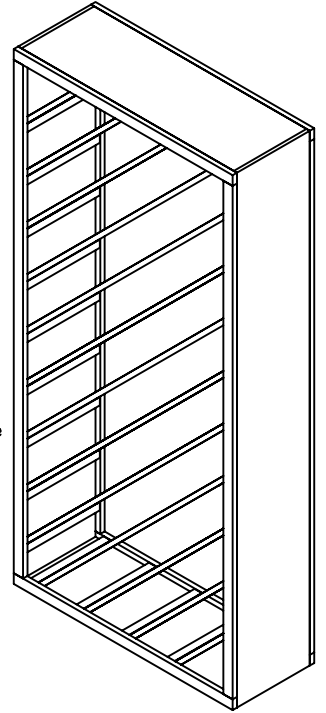

4. Attach diagonal trim if purchased. Lay trim over cross board so it overhangs the top and bottom of the board evenly. Mark a line at each end of the trim where it intersects with the perimeter trim. Miter cut each piece at the line. Nail in place.

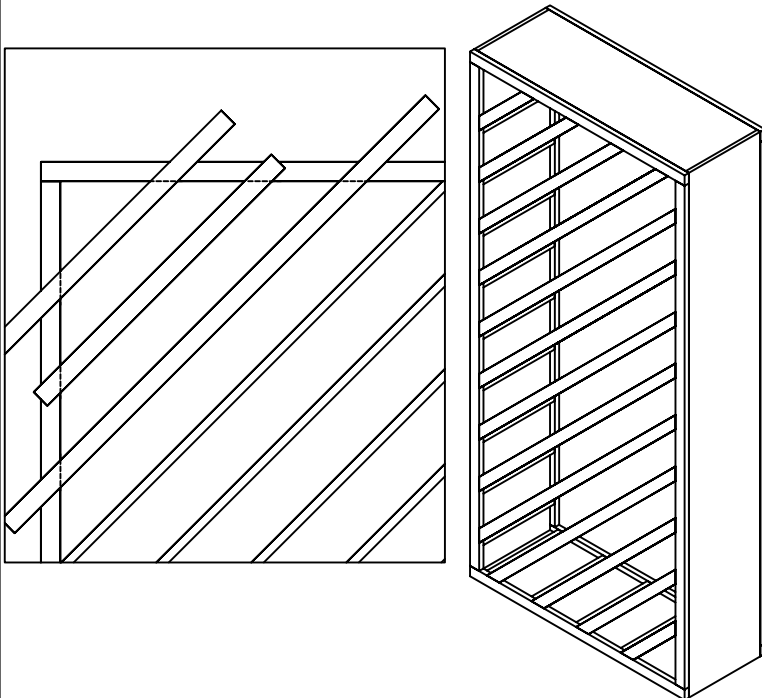

3. Predrill and screw through rear trim into wall with 2 1/4" #6 screws to hold rack securely.

Place 1 screw per side. (Front trim not shown for clarity)

