



# Diamond Bin Assembly Instructions

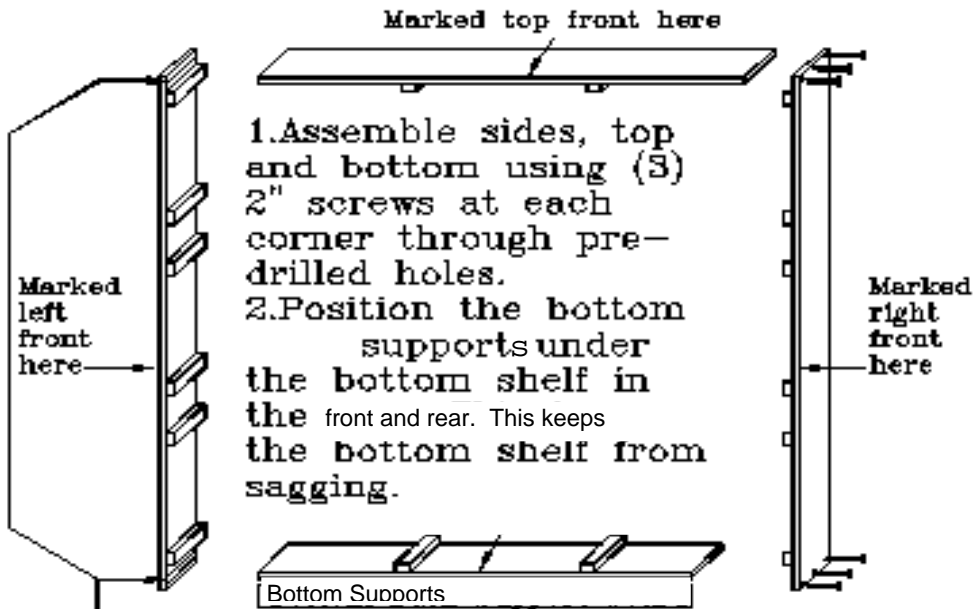


1. Assemble sides, top and bottom using (3) 2" screws at each corner through pre-drilled holes.

2. Position the bottom supports under the bottom shelf in the front and rear. This keeps the bottom shelf from sagging.

Sides have grooves for the top and bottom boards to fit into

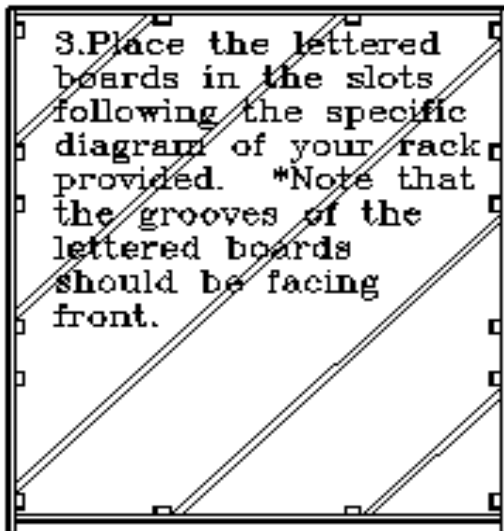

3. Place the lettered boards in the slots following the specific diagram of your rack provided. \*Note that the grooves of the lettered boards should be facing front.

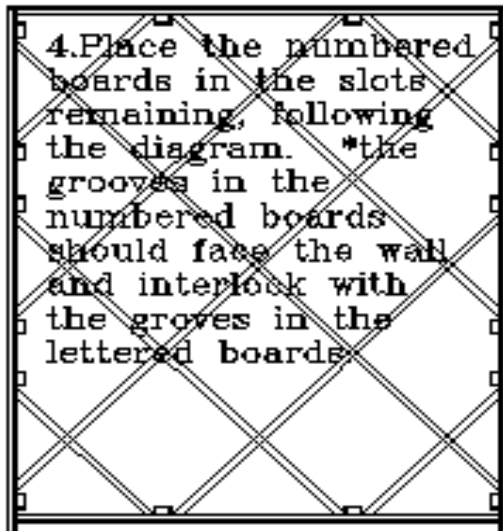


4. Place the numbered boards in the slots remaining, following the diagram. \*the grooves in the numbered boards should face the wall and interlock with the grooves in the lettered boards.



5. Screw side anchors to the right and left sides in the rear with 2 screws through the predrilled holes. Screw side anchors to wall to lock sides in place and keep them from spreading. If walls are drywall use drywall anchors to screw into. Insert anchors into 1/4" holes.

Side Anchor

Side Anchor

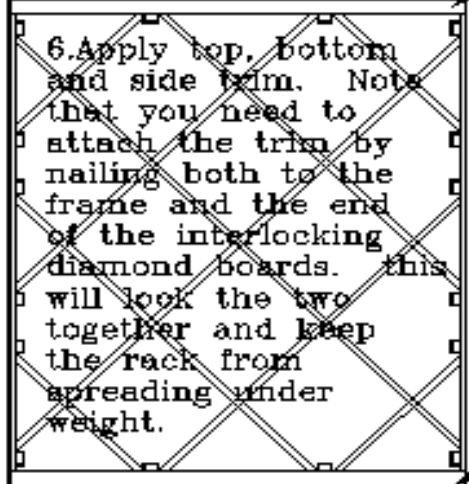

6. Apply top, bottom and side trim. Note that you need to attach the trim by nailing both to the frame and the end of the interlocking diamond boards. This will lock the two together and keep the rack from spreading under weight.