

VintageView[®]

WINE STORAGE SYSTEM

Wall Strip Presentation Rack (WS-PR) Installation Instructions

Wine Master Cellars • 2000 S. Dahlia Street, Unit 300, Denver, CO 80222 • phone: 866.650.1500 • fax: 866.650.1501
Please feel free to contact us regarding the assembly of this product.

Each WS-PR kit contains:



- 1 Wall Strip Presentation Rack (WS-PR)
- 8 Black Plastic Mounting Hole Caps (Bagged)
- 5 Black Plastic Couplers (Bagged)
- 6 Black Plastic End Caps (Installed)

Before starting, open all Packaging for the WS-PR and take inventory to make sure you have everything.

Tools Needed:

- 1 Level
- 1 Marking Pen or Pencil (Necessary in Some Cases)
- 1 Tape Measure (Necessary in Some Cases)
- 1 Phillips Head Power Screwdriver
- The appropriate **FASTENERS** for the wall surface you are attaching the WS-PR to.

Fasteners:

There are eight pre-drilled Mounting Holes for fasteners on each WS-PR Series Rack. It is strongly recommended that appropriate fasteners be used in every Mounting Hole. We do not include fasteners with your WS-PR. However, we recommend the following fasteners for these surfaces:

- Wood Surface: #8 x 1-1/4" wood screw
- Drywall/Wallboard Surface: #8 x 1-1/4" screw with spiral inserts and/or expanding hollow wall anchors such as toggle bolts
- Concrete, Brick or Stucco: 3/16" x 1 3/4" masonry screw or expanding anchor

NOTE: If you are attaching the WS-PR to a VintageView[®] Floor to Ceiling Frame (FCF) you will attach the WS-PR to the FCF using the self-drilling screws included in the FCF packaging.

WS-PR Installation Instructions

NOTE: If you are installing the WS-PR to a wall or FCF above or below a WS-3 or WS-4 Series Rack System: Install the WS Series Racks before installing the WS-PR.

Installation to a Wall


1 - Installation to a Wall above WS Series Racks

1.1 Remove the Black Plastic End Cap that is inserted into the bottom of each of the four Mounting Braces on the WS-PR.

NOTE: If you will be installing the WS-PR next to other WS-PRs also remove the Black Plastic End Caps on both sides of the WS-PR and insert a Black Plastic Coupler to one side of the WS-PR.

1.2 Remove the Black Plastic End Caps from the top of the WS Series Racks that correspond to the Mounting Braces on the WS-PR.

1.3 Insert the Black Plastic Couplers into the top of the WS Series Strips.

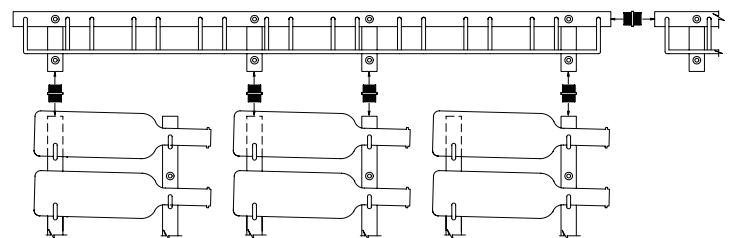

Installation to a Wall (cont.)

1.4 Align the WS-PR Mounting Braces directly over the WS Wall Strips and attach to the Wall Strips by sliding the WS-PR onto the Couplers fixed into the WS Series Strips.

1.5 Using the Appropriate Fasteners; mount the WS-PR to the wall through the hole in each of the 4 WS-PR Mounting Braces, and the hole above each Mounting Brace.

1.6 Attach the Black Plastic Mounting Hole Caps over the fasteners in

2 – Installation to a Wall below WS Series Racks

NOTE: If you will be installing the WS-PR next to other WS-PRs remove the Black Plastic End Caps on both sides of the WS-PR and insert a Black Plastic Coupler into one side of the WS-PR.

2.1 Align the WS-PR below the WS Series Wall Strips and make note of the Wall Strips that correspond to the Mounting Braces of the WS-PR.

2.2 With a tape measure, measure 8 inches down from the bottom of the two outermost corresponding Wall Strips of the WS Series Racks that are placed above the location you wish to install the WS-PR. Mark those spots on the wall with a marking pen or pencil.

2.3 Align the bottom of the legs of the Mounting Braces to the marks that you made.

2.4 Using the appropriate fastener mount the WS-PR to the wall through one of the outer Mounting Holes. Do Not fully Tighten.

2.5 Using a level make sure that the WS-PR is level and then mark the wall through the other seven Mounting Holes with a marking pen or pencil.

2.6 Mount the WS-PR to the wall with the fasteners through the seven remaining Mounting Holes on the WS-PR to the locations indicated by your markings. Fully tighten all fasteners.

2.7 Attach the Black Plastic Mounting Hole Caps over the fasteners in the 8 Mounting Holes.

3 – Installation to a Wall with no WS Series Racks

NOTE: If you will be installing the WS-PR next to other WS-PRs remove the Black Plastic End Caps on both sides of the WS-PR and insert a Black Plastic Coupler into one side of the WS-PR.

3.1 Place the WS-PR against the wall where you would like to install it and attach one appropriate fastener to the wall through a Mounting Hole on the WS-PR. Do not fully tighten.

3.2 Using a level make sure that the WS-PR is level and then mark the wall through the other seven Mounting Holes with a marking pen or pencil.

3.3 Mount the WS-PR to the wall with the fasteners through the seven remaining Mounting Holes on the WS-PR to the locations indicated by your markings. Fully tighten all fasteners.

3.4 Attach the Black Plastic Mounting Hole Caps over the fasteners in the 8 Mounting Holes.

Installation to an FCF

1 - Installation to an FCF above WS Series Racks

1.1 Remove the Black Plastic End Cap that is attached to the bottom each of the four Mounting Braces on the WS-PR.

NOTE: If you will be installing the WS-PR next to other WS-PRs also remove the Black Plastic End Caps on both sides of the WS-PR and insert a Black Plastic Coupler into one side of the WS-PR.

1.2 Remove the Black Plastic End Caps on top of the vertical Strips attached to the FCF of the WS Series Racks that correspond to the Mounting Braces on the WS-PR.

1.3 Insert the Black Plastic Couplers into the top of the WS Series Strips. 1.4 Align the WS-PR Mounting Braces directly over the WS Series Strips and attach to the Strips by sliding the WS-PR onto the Couplers fixed into the WS Series Strips.

1.5 Using the Self-drilling Screws; mount the WS-PR to the FCF through the Mounting Hole in each of the 4 WS-PR Mounting Braces, and the Mounting Hole above each Mounting Brace.

1.6 Attach the Black Plastic Mounting Hole Caps over the Self-Tapping Screws in the 8 Mounting Holes.

2 – Installation to an FCF below WS Series Racks

NOTE: If you will be installing the WS-PR next to other WS-PRs remove the Black Plastic End Caps on both sides of the WS-PR and attach a Black Plastic Coupler to one side of the WS-PR.

2.1 Align the WS-PR below the WS Series Strips and make note of the Strips that correspond to the Mounting Braces of the WS-PR.

2.2 With a tape measure, measure 8 inches down from the bottom of the two outermost corresponding Strips of the WS Series Racks that are placed above the location you wish to install the WS-PR. Mark those spots on the FCF with a marking pen or pencil.

2.3 Align the bottom of the legs of the Mounting Braces to the marks that you made.

2.4 Using the Self-drilling Screws mount the WS-PR to the FCF through one of the outer Mounting Holes. Do Not fully Tighten.

2.5 Using a level make sure that the WS-PR is level and then mark the FCF through the other seven Mounting Holes with a marking pen or pencil.

2.6 Mount the WS-PR to the FCF with the Self-drilling Screws through the seven remaining Mounting Holes on the WS-PR to the locations indicated by your markings. Fully tighten all Self-drilling Screws.

2.7 Attach the Black Plastic Mounting Hole Caps over the Self-drilling Screws in the 8 Mounting Holes.

3 – Installation to an FCF with no WS Series Racks

NOTE: If you will be installing the WS-PR next to other WS-PRs also remove the Black Plastic End Caps on both sides of the WS-PR and attach a Black Plastic Coupler to one side of the WS-PR.

3.1 Place the WS-PR against the FCF where you would like to install it and attach one Self-Tapping Screw to the FCF through a Mounting Hole on the WS-PR. Do not fully tighten.

3.2 Using a level make sure that the WS-PR is level and then mark the FCF through the other seven Mounting Holes with a marking pen or pencil.

3.3 Mount the WS-PR to the FCF with the Self-drilling Screws through the seven remaining Mounting Holes on the WS-PR to the locations indicated by your markings. Fully tighten all Self-drilling Screws.

3.4 Attach the Black Plastic Mounting Hole Caps over the Self-drilling Screws in the 8 Mounting Holes.